

COFFEE FORMAT®

www.coffeeformat.pl

Instrukcja obsługi
User Manual



JX-683

Młynek kawy
Coffee Grinder

COFFEE FORMAT®

SPIS TREŚCI | TABLE OF CONTENTS

PL

Parametry młynka do kawy JX-683.....	1
Ostrzeżenia	1
Opis części	2
Instrukcja obsługi młynka do kawy JX-683.....	3
Instrukcja obsługi ekranu dotykowego.....	4
Obsługa trybu automatycznego / ręcznego.....	6
Regulacja grubości mielenia	6
Czyszczenie i konserwacja	6
Explosive View	15

EN

The Parameters of JX-683 Coffee Grinder.....	8
Warnings.....	8
The Designation of Parts	9
The instruction of JX-683 coffee grinde.....	10
Touchscreen operation instructions.....	11
Automatic / Manual Mode Operation.....	13
Grinding coarseness adjustment	13
Cleaning and maintenance.....	14
Explosive View	15

Manufacturer:

Shaoxing Jiehui Electrical Appliances Co., Ltd.
Guzhu Village, Daoxu Street, Shangyu District,
Shaoxing City, Zhejiang Province, China

Produced for:

Aqua Solution Sp. z o.o.
Piekary 371, 32-060 Piekary, Poland
biuro@aquasolution.pl
12 201 86 96

COFFEE FORMAT

www.coffeeformat.pl

PL


PARAMETRY

Model produktu	JX-683
Wymiary (S*W*G)	25x66,5x40 cm
Waga brutto/netto	19kg / 16,8kg
Średnica żaren	83mm (płaskie żarna)
Parametry techniczne	550 W / 220-240V / 50Hz
Pojemność pojemnika	1,2kg

OSTRZEŻENIA

1. Proszę dokładnie przeczytać i zachować instrukcję obsługi.
2. Plastikowe torebki i opakowania nie są zabawkami i mogą być niebezpieczne. Aby uniknąć ryzyka uduszenia, trzymaj torby z dala od dzieci i niemowląt. Usuń folie przed użyciem.
3. Trzymaj maszynę z dala od dzieci. Jeśli w pobliżu znajduje się dziecko, proszę je nadzorować.
4. Produkt jest przystosowany do napięcia 220-240V/50Hz.
5. Przed użyciem produktu należy sprawdzić, czy przewód zasilający nie jest uszkodzony, oraz pamiętać o wyłączeniu zasilania po użyciu.
6. Produkt należy postawić na płaskim blacie i trzymać z dala od krawędzi.
7. Regulację młynka należy wykonywać podczas pracy silnika, w przeciwnym razie silnik może się zablokować.
8. Nie wkładać palców do urządzenia, gdy jest podłączone do zasilania.
9. Nie czyścić żaren młynka wodą ani innymi cieczami.
10. Nie używać produktu do innych celów niż mielenie kawy ziarnistej.
11. Nie czyścić wodą. Chronić od kontaktu z wodą.

OPIS CZĘŚCI

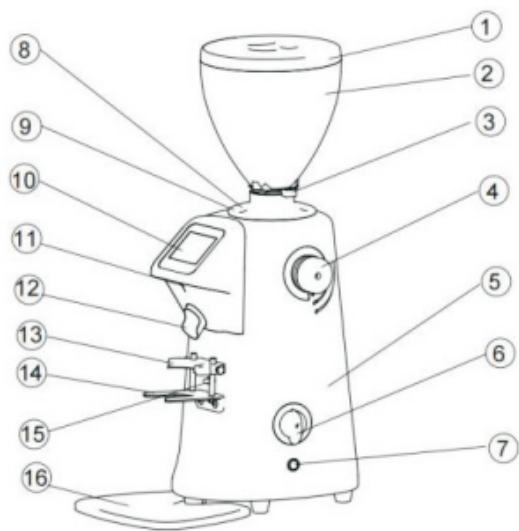

- | |
|---------------------------------------|
| 1. Pokrywa pojemnika na ziarna. |
| 2. Pojemnik na ziarna: 1,2kg. |
| 3. Zawleczka pojemnika. |
| 4. Pokrętko grubości mielenia. |
| 5. Obudowa. |
| 6. Pokrętko ON/OFF. |
| 7. Lampka kontrolna zasilania. |
| 8. Czujnik indukcyjny. |
| 9. Osłona żaren. |
| 10. Ekran dotykowy. |
| 11. Lampka kontrolna mielenia. |
| 12. Wylot zmielonej kawy. |
| 13. Zacisk. |
| 14. Uchwyt na zbiornik kawy mielonej. |
| 15. Czujnik wagi. |
| 16. Tacka. |

INSTRUKCJA OBSŁUGI MŁYNKA DO KAWY JX-683

1. Umieścić młynek na płaskiej powierzchni. Tackę umieścić pod wylotem zmielonej kawy.




2. Wsypać ziarna kawy do pojemnika, zamknąć pokrywę, a następnie otworzyć zasuwę pojemnika.

Zatrząsk pojemnika powinien być dopasowany do miejsca montażu zbiornika i obrócony zgodnie z ruchem wskazówek zegara, jak pokazano na ilustracji.

Wskazówka:

Jeśli pojemnik zostanie zamontowany nieprawidłowo, młynek nie będzie działał.

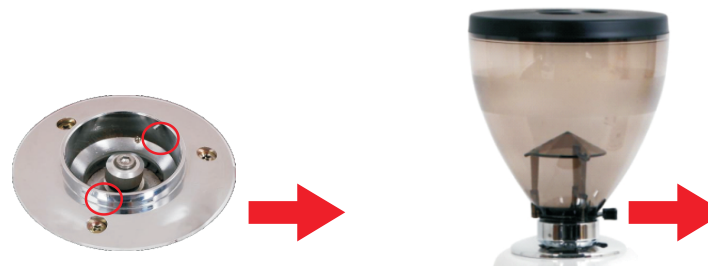

Wskazówka:

Upewnij się, że w pojemniku znajduje się wystarczająca ilość ziaren kawy, aby zapewnić ciągłość i jednakową jakość mielenia.

3. W pojemniku na ziarna znajduje się osłona ochronna, która zapobiega zranieniu palców po ich wsunięciu do środka.



4. Podłącz zasilanie i włącz przełącznik ustawiając go w pozycji „ON” (Lewy i prawy bok pokrętki OFF/ON to oba włączniki ON. Środkowa pozycja to OFF)

Instrukcja obsługi panelu sterowania


Urządzenie oferuje kilka trybów pracy: tryb „jednej filiżanki”, tryb pracy ciągłej, tryb „dwóch filiżanek”. Panel sterowania obejmuje również przycisk „START” oraz przycisk ustawień. Użytkownik może dostosować czas mielenia, klikając jego wartość, a następnie zapisać ustawienia, naciskając przycisk „OK”.

INSTRUKCJA OBSŁUGI EKRANU DOTYKOWEGO



TRYB WŁĄCZENIA

Po włączeniu młynka ekran wyświetli informację o uruchomieniu.

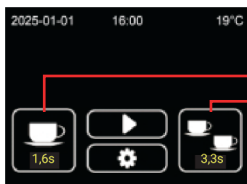

TRYB „JEDNEJ FILIŻANKI”
TRYB „DWÓCH FILIŻANEK”

TRYB „JEDNEJ FILIŻANKI”

Naciśnij przycisk „”, a młynek przejdzie w stan mielenia dla jednej filiżanki, czas mielenia wyniesie 1,6s. Po umieszczeniu kolby mielenie rozpocznie się automatycznie zgodnie z ustawioną dawką. Naciśnij przycisk „”, aby uruchomić tryb jednej filiżanki. Urządzenie zatrzyma się, gdy czas osiągnie 0,0.

TRYB PRACY CIĄGŁEJ

Naciśnij przycisk START „”, aby uruchomić urządzenie. Ponownie naciśnij przycisk START, aby zatrzymać pracę urządzenia.

TRYB „DWÓCH FILIŻANEK”

Naciśnij przycisk „”, a młynek przejdzie w stan mielenia dla dwóch filiżanek, Czas mielenia wyniesie 3,5s. Po umieszczeniu kolby mielenie rozpocznie się automatycznie zgodnie z ustawioną dawką. Naciśnij przycisk „”, aby uruchomić tryb dwóch filiżanek. Urządzenie zatrzyma się, gdy czas osiągnie 0,0.



TRYB USTAWIEŃ:

Język: Chiński/Angielski.

Ustawienia czasu: Kliknij wartość czasu, aby bezpośrednio wybrać jego wartość.

Ustawienia systemowe: Licznik całkowitej liczby filiżanek, resetowanie danych (hasło: 123456).

Uruchamianie: AUTOMATYCZNE lub MANUALNE.

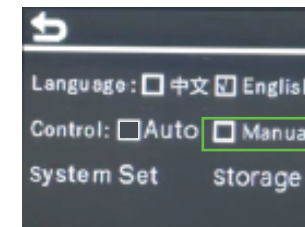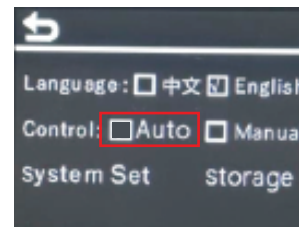

INSTRUKCJA OBSŁUGI PRZELĄCZNIKA

Po włączeniu maszyny użytkownicy mogą również sterować nią, naciskając przełącznik. Szczegółowe informacje znajdują się poniżej.



OBSŁUGA TRYBU AUTOMATYCZNEGO ORAZ TRYBU RĘCZNEGO

Tryb automatyczny:

Po włączeniu przełącznika urządzenie rozpoczyna pracę i będzie działać nieprzerwanie, nawet jeśli uchwyt zostanie odsunięty. Aby zatrzymać urządzenie, należy ponownie nacisnąć przełącznik.

Tryb manualny:

Po naciśnięciu przełącznika młynek rozpoczyna pracę. Zatrzyma się automatycznie, gdy uchwyt zostanie odsunięty, co oznacza, że użytkownik musi go trzymać przez cały czas działania urządzenia.

REGULACJA GRUBOŚCI MIELENIA

Zgodnie ze skalą 1-9, lekko obróć pokrętkę regulacji mielenia, aby ustawić je w odpowiedniej pozycji.



- Obrót zgodnie z ruchem wskazówek zegara sprawia, że kawa będzie mielona drobniej.
- Obrót przeciwnie do ruchu wskazówek zegara sprawia, że kawa będzie mielona grubiej.

Regulacja grubości mielenia powinna być wykonywana podczas pracy młynka (szczególnie przy przechodzeniu z grubego mielenia na drobne), aby uniknąć zablokowania ziaren kawy.

CZYSZCZENIE I KONSERWACJA

Przed czyszczeniem młynka do kawy należy wyłączyć zasilanie i poczekać na ostygnięcie.

Czyszczenie korpusu, pojemnika na ziarna i tacki:

- Po zakończeniu mielenia kawy należy obrócić pojemnik przeciwnie do ruchu wskazówek zegara, aby go wyjąć.
- Umyć pojemnik na ziarna i tackę czystą wodą, a następnie pozostawić je do wyschnięcia.
- Korpus można wyczyścić wilgotną ściereczką.

Czyszczenie żaren młynka:

Jeśli wystąpi zablokowanie zmielonej kawy, wykonaj następujące czynności:

- Poluzuj trzy śruby mocujące za pomocą klucza sześciokątnego. (Górna osłona jest zamocowana razem z jednoczęściowym żarnem.)
- Obróć pokrętkę przeciwnie do ruchu wskazówek zegara i zdejmij je. Nie ma potrzeby luzowania żaren mielących. (Zwróć uwagę na czujnik.)
- Użyj szczoteczki do czyszczenia młynka. Nigdy nie używaj bieżącej wody do czyszczenia żaren.
- Nie usuwaj uchwytu żaren, aby nie wpłynąć na precyzję działania maszyny.
- Wymiana i montaż nowych żaren to precyzyjne zadanie. Może być wykonywane wyłącznie przez wykwalifikowany personel. Po czyszczeniu i wymianie elementów upewnij się, że wszystkie części i śruby zabezpieczające są ponownie zamontowane w taki sam sposób, w jaki zostały odłączone.

Czyszczenie wylotu kawy mielonej.

- Wylot kawy mielonej jest odłączany, co ułatwia jego czyszczenie.
- Obróć wylot przeciwnie do ruchu wskazówek zegara i wyciągnij go w dół.
- Czyść wylot miękkimi szczoteczkami lub wodą.
- Upewnij się, że wylot jest dobrze wysuszony, a następnie umieść go w otworze i obróć zgodnie z ruchem wskazówek zegara.
- Wylot jest prawidłowo zamontowany.




PARAMETERS

Model	683
Dimensions (WHD)	25x66,5x40 cm
Gross/Net Weight	19kg / 16,8kg
Burr Diameter	83mm (flat burrs)
Technical Specifications	550 W / 220-240V / 50Hz
Container Capacity:	1,2kg

WARNINGS

- 1. Please read carefully and keep the instruction manual.
- 2. Plastic bags and packaging are not toys and may be dangerous. To avoid the risk of suffocation, keep bags away from children and infants. Remove the foil before use.
- 3. Keep the machine away from children. If a child is nearby, please supervise them.
- 4. The product is designed for 220-240V/50Hz voltage.
- 5. Before use, check if the power cord is not damaged, and always unplug the device after use.
- 6. Place the product on a flat surface and keep it away from edges.
- 7. Do not adjust the grind settings while the grinder is running, as the mechanism may become jammed.
- 8. Do not insert fingers into the device, even when it is turned off.
- 9. Do not clean the burrs with water or other liquids.
- 10. Do not use the product for purposes other than grinding coffee beans.
- 11. Do not clean with liquid. Protect from contact with liquid.

DESCRIPTION OF PARTS

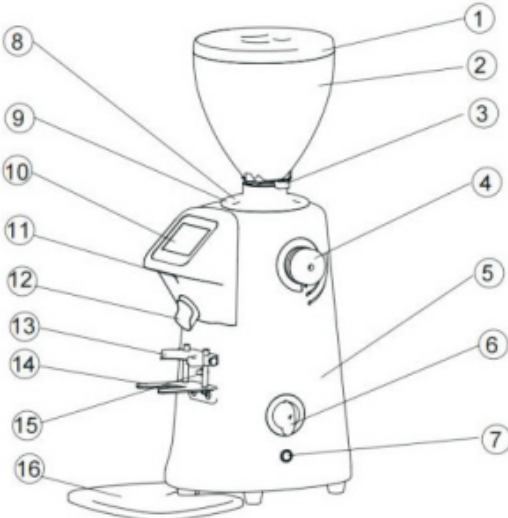

1.	Lid.
2.	Bean hopper: 1.2 kg.
3.	Container latch.
4.	Grinding adjustment knob.
5.	Body.
6.	ON/OFF knob.
7.	Power indicator light.
8.	Inductive sensor.
9.	Burr cover.
10.	Touchscreen.
11.	Grinding indicator light.
12.	Ground coffee outlet.
13.	Portafilter slot clamp.
14.	Portafilter slot.
15.	Push switch.
16.	Tray

THE INSTRUCTION OF JX-683 COFFEE GRINDE

1. Place the grinder on a flat surface. Position the tray under the ground coffee outlet.



2. Pour coffee beans into the container, close the lid, and then open the container's slide gate.

The container latch should be properly aligned with the mounting point and rotated clockwise, as shown in the illustration.

TIP:
If the container is not installed correctly, the grinder will not function.



TIP:
Ensure that there are enough coffee beans in the container to maintain consistent grinding quality.

3. The bean container has a protective cover that prevents fingers from getting injured if inserted inside.



4. Connect the power supply and turn on the switch by setting it to the "ON" position (both the left and right sides of the OFF/ON dial must be in the ON position. The middle position is OFF).

Control Panel Operation Instructions


The device offers several operating modes: "single cup" mode, continuous operation mode, and "double cup" mode. The control panel also includes a "START" button and a settings button. The user can adjust the grinding time by clicking on its value and then save the setting by pressing the "OK" button.

TOUCHSCREEN OPERATION INSTRUCTIONS



STARTUP MODE

After turning on the grinder, the screen will display startup information.

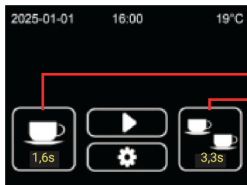

SINGLE CUP MODE
DOUBLE CUP MODE

"SINGLE CUP" MODE

Press the button "", and the grinder will enter the grinding mode for a single cup. The grinding time will be 1.6 seconds. When the portafilter is placed, the grinding will begin according to the set dosage automatically. Press the button "" to start the single cup mode. The device will stop when the timer reaches 0.0.

CONTINUOUS OPERATION MODE

Press the START button "" to start the device. Press the START button again to stop the operation.

"DOUBLE CUP" MODE

Press the button "", and the grinder will enter the grinding mode for two cups. The grinding time will be 3.5 seconds. When the portafilter is placed, the grinding will begin according to the set dosage automatically. Press the button "" to start the double cup mode. The device will stop when the timer reaches 0.0.



SETTINGS MODE:

Language: Chinese/English.

Time Settings: Click on the time value to select it directly.

System Settings: Total cup counter, data reset (password: 123456).

Startup Mode: **AUTOMATIC** or **MANUAL**.

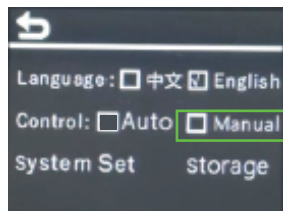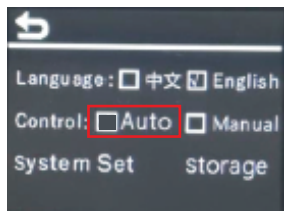

SWITCH OPERATION INSTRUCTIONS

After turning on the machine, users can also control it by pressing the switch. Detailed information is provided below.



AUTOMATIC AND MANUAL MODE OPERATION

Automatic Mode:

Once the switch is turned on, the device starts operating and will continue to work continuously, even if the handle is removed. To stop the device, press the switch again.

Manual Mode:

After pressing the switch, the machine starts working. It will stop automatically when the handle is removed, meaning the user must hold it throughout the device's operation.

GRINDING COARSENESS ADJUSTMENT

Adjust the grinding coarseness by gently turning the adjustment dial according to the 1-9 scale.



- Turning clockwise results in finer coffee grounds.
- Turning counterclockwise results in coarser coffee grounds.

Important: Grinding coarseness should be adjusted while the grinder is operating, especially when switching from coarse to fine grinding, to prevent coffee beans from clogging.

CLEANING AND MAINTENANCE

Before Cleaning the Coffee Grinder:

Turn off the power and wait for the machine to cool down.

Cleaning the Housing, Bean Container, and Tray:

- a. After grinding, turn the bean container counterclockwise to remove it.
- b. Wash the bean container and tray with clean water and let them dry completely.
- c. Wipe the housing with a damp cloth.

Cleaning the Grinder Burrs:

If ground coffee becomes clogged, follow these steps:

- a. Place three screws that hold the conical burr securely.
(The upper part is mounted together with the stationary burr.)
- b. Turn the dial counterclockwise and remove it.
(Do not loosen the grinding burrs. Pay attention to the sensor.)
- c. Use a brush to clean the grinder.
(Never use running water to clean the burrs.)
- d. Do not remove the burr holder, as it may affect machine precision.
- e. Burr replacement and installation require precision and must be performed by qualified personnel.

After cleaning or replacement, ensure that all parts and securing screws are reassembled as originally installed.

Cleaning the Ground Coffee Outlet:

- The outlet is detachable, making it easier to clean.
- Turn the outlet counterclockwise and pull it downward.
- Clean with a soft brush or water.
- Ensure it is dry before reinserting it into the opening and turning it clockwise to secure it.
- The outlet is correctly installed when it is firmly in place.



EXPLOSIVE VIEW

NO.	Partname	Material&Spec.	Qty.	NO.	Partname	Material&Spec.	Qty.
46	machine screw	M4*10	11	1	hopper lid	ABS	1
47	LCD touch screen	/	1	2	hopper	PC	1
48	tapping screw	ST3*6	4	3	protection cover	PC	1
49	touch screen base	ABS	1	4	hopper door	ABS	1
50	touch screen cover	ABS	1	5	hopper holder	PC	1
51	front panel	PMMA	1	6	machine screw	M5*16	3
52	LED light cover	/	1	7	upper burr holder	ADC12	1
53	square nut	17*12*3 M5	2	8	burr/blade	high speed steel	2
54	tapping screw	ST3.0*10	2	9	round phillips screw	M4*10	6
55	Hang buckle	iron	1	10	tapping screw	ST3.0*12	3
56	tapping screw	ST3.0*10	4	11	magnet	NdFeB	2
57	phillips screw	M5*12	4	12	pin	stainless steel	2
58	cover fastener	iron	2	13	Left hand screw	M6*15	1
59	hexagon socket screw	M5*16	2	14	spring cap	6061	1
60	powder tube	stainless steel	1	15	gasket	M6 external gear	8
61	holder screw	M4*10	2	16	spring	2*16.5 5*21 65 Mn	1
62	upper holder	ADC12	1	17	bottom burr holder	ADC12D	1
63	holder pole	stainless steel	2	18	bearing	6003RZ	2
64	spring gasket	M5	2	19	O ring	20*1.8	1
65	hexagon nut	M5	1	20	inductive switch	4*18	1
66	bottom holder	ADC12	1	21	round phillips screw	M3*8	2
67	switch lengthener front	aluminium	1	22	Knob adjusting shaft	copper	1
68	switch lengthener back	aluminium	1	23	bearing	699Z	1
69	push switch	16-V	1	24	bearing fixing nut	6061	1
70	ball screw	M5*6	2	25	rotary knob	ADC12	1
71	spring pin	Φ3*8	2	26	ball screw	M4*10	1
72	spring	0.6*5.5*21	2	27	spring	/	1
73	upper slider	ADC12	1	28	Knob dial ring	ADC12	1
74	bottom slider	ADC12	1	29	dial paster	PET	1
75	round phillips screw	M6*12	4	30	machine screw	M4*10	1
76	bottom slider	ADC12	1	31	gasket	M4 external gear	7
77	machine screw pole	M6*80 L8.8	3	32	flat phillips screw	M4*12	3
78	motor	220 240V 50Hz 550W	1	33	fluted disc	nylon+fiberglass	1
79	motor fixing board	iron	1	34	power switch	220 240V 50Hz	1
80	ma in board base	ABS	1	35	O ring	rubber	1
81	machine base	ABS	1	36	powder switch paster	AL	1
82	earthing terminal	/	1	37	machine screw	M4*20	2
83	tapping screw	ST3.5*24	2	38	rotary knob cover	ABS chrome	1
84	main board	/	1	39	machine screw	M3*10	1
85	rubber foot	rubber 29*20	5	40	axle sleeve	17*12*35	1
86	tray	ABS Chrome painting	1	41	body	ADC12	1
87	capacitor	16nF	1	42	indicator light	YJ G016 220W	1
88	transformer	input 220V.output 9V, 5W	1	43	silicone A	silicone	1
89	cable	300/500V 3*0.75	1	44	silicone B	silicone	1
90	inner cable	300/500V 3*1.0	1	45	upper powder tube	ABS	1

EXPLOSIVE VIEW

