


COFFEE FORMAT®
www.coffeeformat.pl

Instrukcja obsługi
User Manual

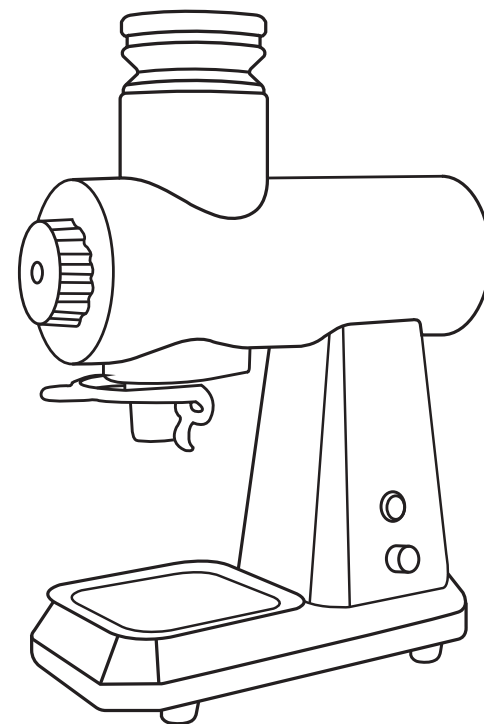

JX-928

Młynek kawy
Coffee Grinder

COFFEE FORMAT®

PARAMETRY

Model produktu	JX-928
Wymiary (S*W*G)	15x42,5x31,2cm
Waga netto/brutto	8,3kg / 10,5kg
Średnica żaren	74mm (płaskie żarna)
Parametry techniczne	220-240V 50/60Hz, 600W
Prędkość silnika	600-1400 obr./min
Pojemność pojemnika	120g
Regulacja temperatury	Chłodzenie wentylatorem

CECHY SZCZEGÓLNE



- duży moment obrotowy
- niski poziom hałasu
- niski poziom vibracji
- bezstopniowa regulacja prędkości



- bezpyłowy system instalacji
- łatwo demontowalny wylot kawy
- wygodny system montażu
- praktyczny pojemnik na zmieloną kawę



- system wydmuchu powietrza
- urządzenie do osadzania powietrza
- niska ilość pozostałości pyłu kawowego



- wielostopniowa regulacja
- interwał jednego cyklu podnoszenia wynosi 0,8mm
- 90. stopniowa skala regulacji




- oryginalne włoskie żarna
- młynek tarczowy 74mm
- szybki i wygodny w obsłudze



- niezawodny system chłodzenia
- regulacja temperatury poprzez wbudowany wentylator

OPIS CZĘŚCI

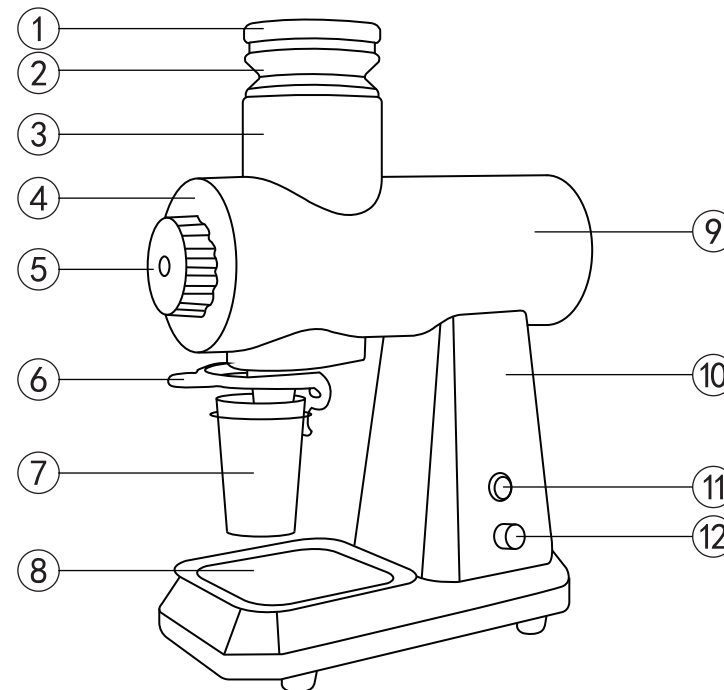

1. Pokrywa pojemnika na ziarna.

2. System "Air blowing".

3. Pojemnik na ziarna: 120g.

4. Tarcza regulatora grubości mielenia.

5. Regulator grubości mielenia.

6. Uchwyt zbiornika na kawę mieloną.

7. Zbiornik na kawę mieloną.

8. Taca.

9. Obudowa.




10. Baza silnika.

11. Wskaźnik zasilania.


12. Pokrętko regulacji prędkości.

INSTRUKCJA OBSŁUGI


Proszę odmierzyć określoną ilość ziaren kawy, gdyż urządzenie zmieli wszystkie ziarna znajdujące się w jego wnętrzu.

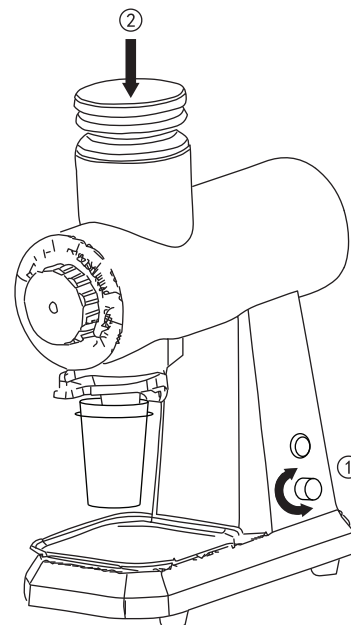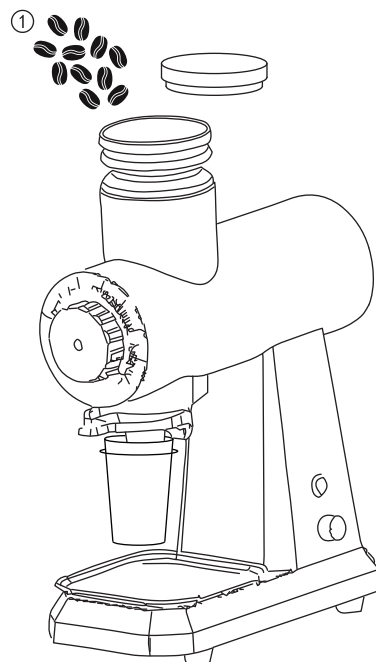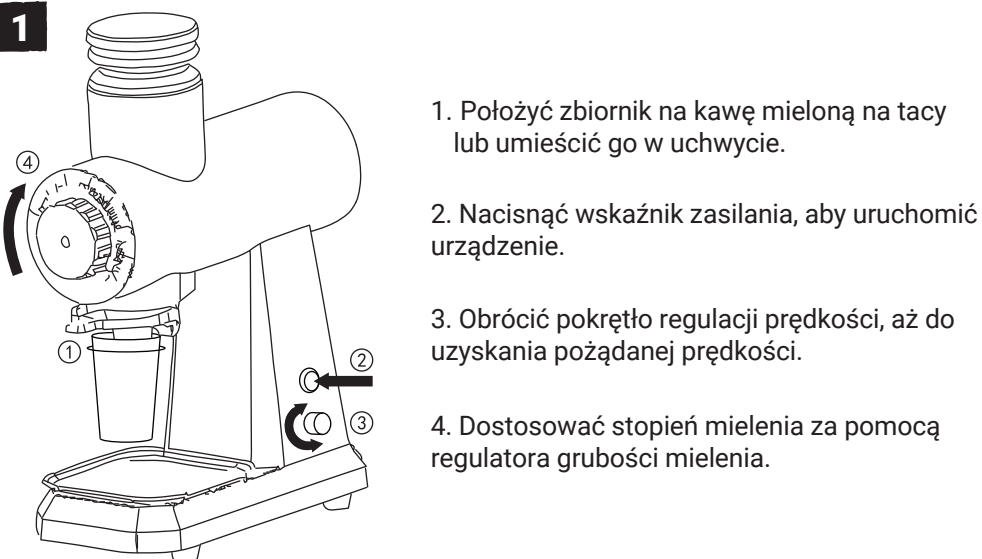

1. Po skończonej pracy nacisnąć wskaźnik zasilania, w celu wyłączenia urządzenia.

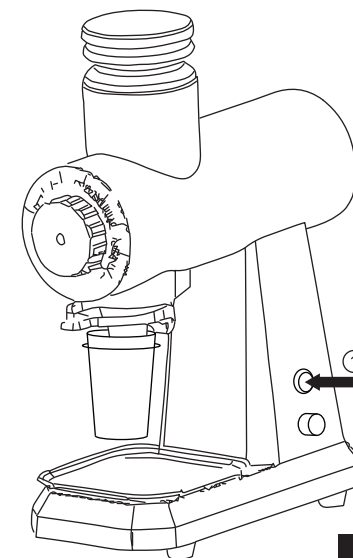

REGULACJA GRUBOŚCI MIELENIA

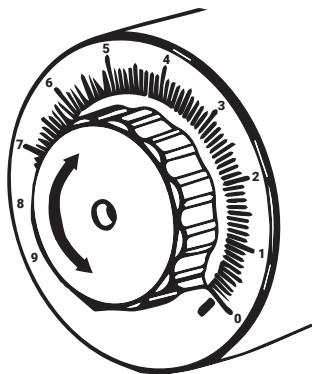


1. Regulator grubości mielenia zawiera 90 stopni grubości mielenia ziaren.
2. Mała strzałka na tarczy regulatora wskazuje aktualny stopień mielenia.
3. Im mniejsza cyfra, tym drobniejszy stopień zmielenia ziaren.

OSTRZEŻENIA

1. Nie umieszczać urządzenia w pobliżu kuchenki gazowej, elektrycznej lub ognia.
2. Plastikowe torebki i opakowania nie są zabawkami i mogą być niebezpieczne. Aby uniknąć ryzyka uduszenia, trzymać torby z dala od dzieci i niemowląt. Usunąć folie przed użyciem.
3. Nie należy myć żadnych części urządzenia, za wyjątkiem Systemu "Air blowing".
4. Po użyciu czyścić przy pomocy szczotek lub strumienia powietrza.
5. Należy regulować pokrętło grubości mielenia przy pracującym silniku, w przeciwnym razie silnik zostanie zablokowany i wystąpi błąd.
6. Nie używać urządzenia w celu innym, niż mielenie ziaren kawy.
7. Nie wkładać palców w części urządzenia, podczas jego pracy.
8. Jeśli przewód zasilający jest uszkodzony, należy go wymienić zgodnie ze specjalnymi instrukcjami.

CZYSZCZENIE I KONSERWACJA

W celu uzyskania wskazówek należy skonsultować się z profesjonalną obsługą klienta. Gwarancja (rok na części elektryczne) nie przysługuje w przypadku wszelkiego rodzaju uszkodzeń i strat spowodowanych indywidualnym demontażem i montażem urządzenia. Wszystkie poniższe kroki należy wykonać przy wyłączonym zasilaniu.

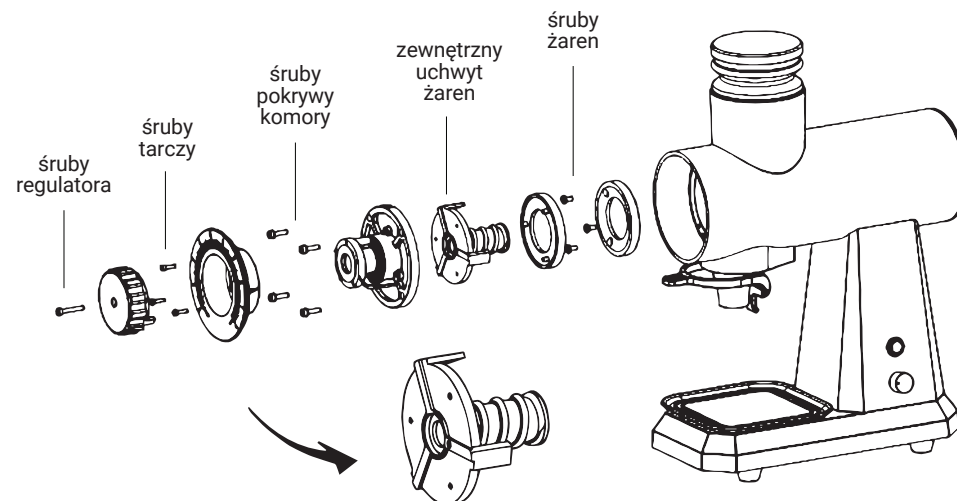

1 DEMONTAŻ ŻAREN

1. Przekręcić regulator grubości mielenia na pozycję numer 9., a następnie kolejno odkręcić śruby mocujące pokrętło, tarczę oraz pokrywę komory. Po odkręceniu wszystkich śrub zdjąć te elementy.
2. Śrubę pokrętła można zamocować w otworze gwintowanym w górnym uchwycie. Aby to zrobić, należy zdjąć górny uchwyt, odkręcić śruby mocujące żarna i zdemontować żarna.

2 CZYSZCZENIE

1. Używać strumienia powietrza lub szczotki do oczyszczenia żaren i wnętrza młynka do kawy. Nie używać wody.
2. Po zakończeniu czyszczenia zamontować ponownie wszystkie części młynka.

3 WYMIANA ŻAREN

1. Zamontować komponenty w odwrotnej kolejności zgodnie z krokiem 1, ustawić elementy w odpowiedniej pozycji i nie dociskać ich.
2. Przed instalacją pokrętła regulacji upewnić się, że znajduje się on w poluzowanej pozycji. Włączyć przełącznik, aby uruchomić silnik, a następnie powoli regulować pokrętło tam i z powrotem, aż do osiągnięcia pozycji, w której nie zahacza żaren.
3. Ustawić pokrętło wskaźnika w pozycji „0” na tarczy regulacyjnej, dokręcić śrubę i wyłączyć przełącznik.

PARAMETERS

Product model	JX-928
Dimensions (W*H*D)	15x42,5x31,2cm
Net/gross weight	8,3kg / 10,5kg
Burr diameter	74mm (flat burrs)
Technical parameters	220-240V 50/60Hz, 600W
Motor speed	600-1400
Hopper capacity	120g
Heat dissipation	Fan cooling

CHARACTERISTICS



- High torque
- Low noise level
- Low vibration level
- Stepless speed control



- Dust-free installation system
- Easily removable coffee outlet
- Convenient mounting system
- Practical container for ground coffee



- Air blowing system
- Air settling device
- Low coffee dust residue



- Multi-stage adjustment
- Single lift cycle interval is 0.8mm
- 90-level adjustment scale




- Original Italian burrs
- 74mm flat burr grinder
- Fast and easy to use



- Reliable cooling system
- Temperature control via built-in fan

DESCRIPTION OF THE PARTS

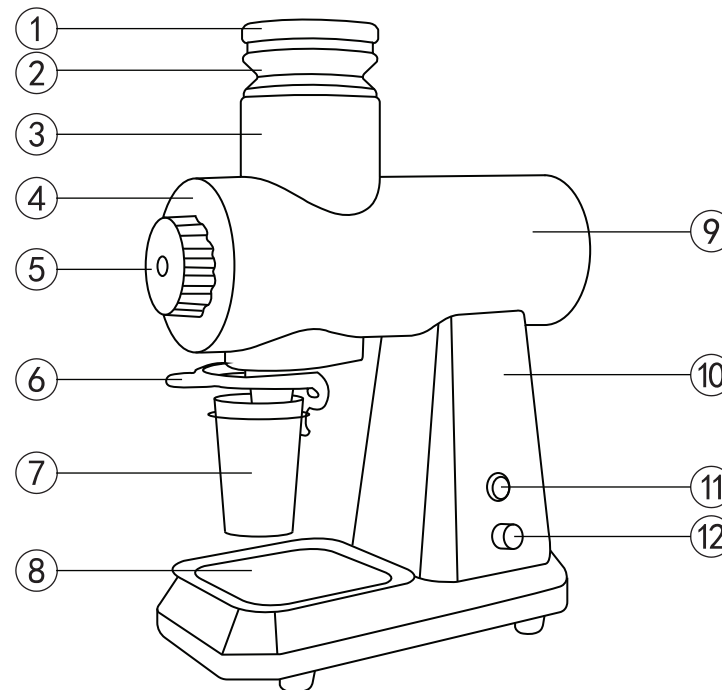


1. Lid.
2. Air blowing system.
3. Bean hopper: 120g.
4. Grind thickness regulator disc.
5. Grinding fineness regulator.
6. Ground coffee container holder.
7. Ground coffee container.
8. Tray.
9. Body.
10. Engine base.
11. Power indicator.
12. Speed control knob.

THE INSTRUCTION

Please measure the specified amount of coffee beans, as the device will grind all the beans inside it.

1

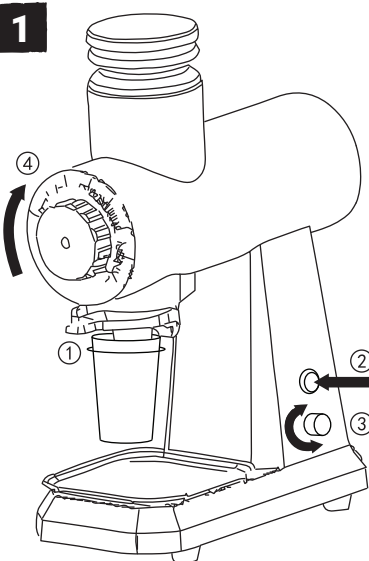

1. Place the container for ground coffee on the tray or place it in the holder.


2. Press the power indicator to turn on the device.

3. Turn the speed control knob until the desired speed is reached.


4. Adjust the grinding level using the grind thickness control.

2

1. Pour the previously measured amount of coffee into the container and close the container.

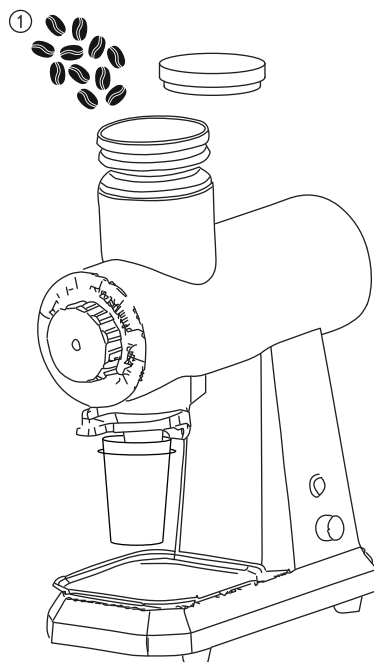

2

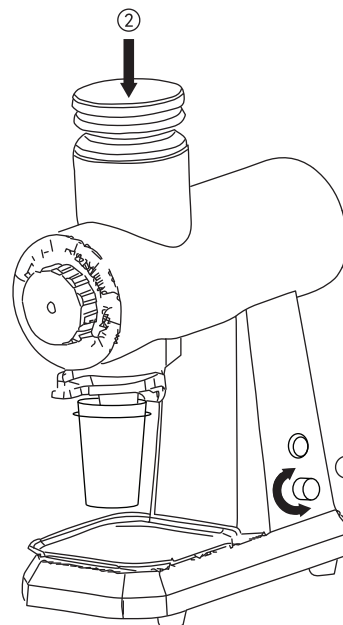


3

1. Start the grinding process by adjusting the speed knob.


2. Press the coffee container lid down dynamically several times to thoroughly clean the container of any remaining coffee grounds.

4

1. After finishing the work, press the power indicator to turn off the device.

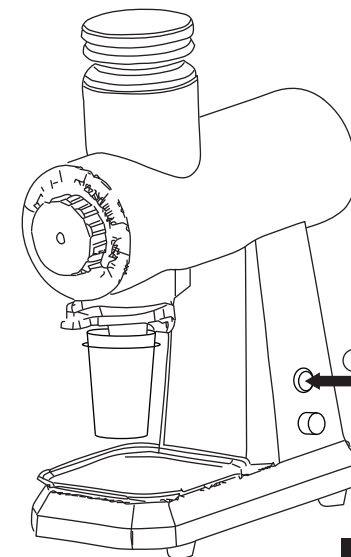

GRINDING THICKNESS ADJUSTMENT

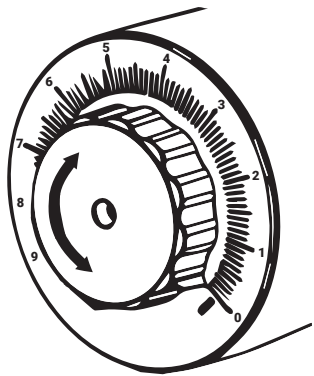

1. The grind thickness regulator has 90 levels of coarseness for grinding the beans.
2. The small arrow on the regulator knob indicates the current grind level.
3. The lower the number of the setting, the finer the grind of the beans.


WARNINGS

1. Do not place the device near a gas stove, electric stove, or fire.
2. Plastic bags and packaging are not toys and may be dangerous. To avoid the risk of suffocation, keep bags away from children and infants. Remove the foil before use.
3. Do not wash any parts of the device, except for the "Air Blowing" System.
4. After use, clean with brushes or a stream of air.
5. The grind thickness knob should be adjusted while the motor is running, otherwise the motor will be blocked and cause error.
6. Do not use the device for any purpose other than grinding coffee beans.
7. Do not insert fingers into parts of the device while it is operating.
8. If the power cord is damaged, it must be replaced according to special instructions.

CLEANING AND MAINTENANCE

For guidance, please consult professional customer service.

The warranty (1 year for electrical parts) does not apply in the case of any damage or loss caused by individual disassembly and reassembly of the device. All the following steps should be performed with the power off.

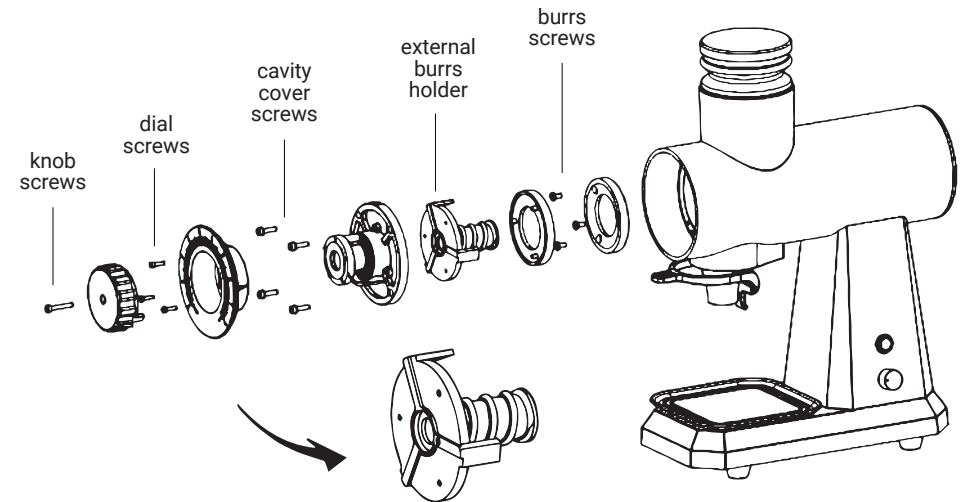

1 REMOVAL OF THE BURRS

1. Turn the grind size regulator to position number 9, then sequentially unscrew the screws securing the knob, the disc, and the chamber cover. After unscrewing all the screws, remove these components.
2. The knob screw can be secured in the threaded hole in the upper bracket. To do this, remove the upper bracket, unscrew the screws securing the burrs, and disassemble the burrs.

2 CLEANING

1. Use an air blower or brush to clean the burrs and the inside of the coffee grinder. Do not use water.
2. After cleaning, reassemble all the parts of the grinder.

3 REPLACEMENT OF THE BURRS

1. Reassemble the components in the reverse order according to step 1, place the parts in the correct position, and do not tighten them.
2. Before installing the adjustment knob, make sure it is in the loosened position.
Turn on the switch to start the motor, then slowly adjust the knob back and forth until reaching the position where the burrs do not touch.
3. Set the indicator knob to the '0' position on the adjustment disc, tighten the screw, and turn off the switch.